


MENABO

PROFESSIONAL AIRDYN

1 2 3 4 5 6

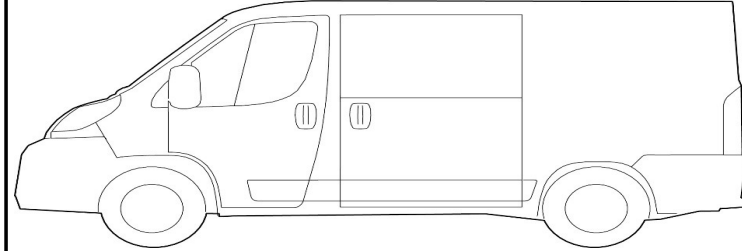

* ON REQUEST

BRAND	MODEL	YEAR	MENABO PLAT CODE	STA	MENABO PLAT DESCRIPTION	POSITION	POSITION	POSITION	POSITION	POSITION	POSITION
						1	2	3	4	5	6
CITROËN	Berlingo III	18>	000132100000	2125901	SET 2 BARRE PROFESSIONAL AIRDYN G	✓		*		✓	
CITROËN	Jumper III	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B	✓		✓			✓
CITROËN	Jumpy III - L1,L2	16>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H	✓		✓		✓	
CITROËN	Relay II - L1,L2,L3,L4 - H1,H2,H3	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B	✓		✓			✓
CITROËN	SpaceTourer	16>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H			✓	*	✓	✓
DACIA	Dokker Van	13>21	000135100000	2125903	SET 2 BARRE PROFESSIONAL AIRDYN L	✓		*			✓
FIAT	Doblò / Doblò Cargo II	15>	000131900000	2125900	SET 2 BARRE PROFESSIONAL AIRDYN E	✓		*			✓
FIAT	Ducato IV	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B	✓		✓			✓
FIAT	Fiorino III	07>	000135000000	2125902	SET 2 BARRE PROFESSIONAL AIRDYN I	✓		*			✓
FIAT	Scudo III	21>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H	✓		✓		✓	
FIAT	Talento II - L1,L2	14>	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A	*	✓		✓		✓
FORD	Tourneo IV Coustom - L1,L2	13>	000135300000	3586106	SET 3 BARRE PROFESSIONAL AIRDYN N	✓		✓			✓
FORD	Transit II Connect - L1	13>									
FORD	Transit II Connect - L1	13>									
FORD	Transit II Connect - L2	13>									
FORD	Transit I Courier	13>									
FORD	Transit I Coustom - L1,L2 H1	13>	000135300000	3586106	SET 3 BARRE PROFESSIONAL AIRDYN N	✓		✓			✓
FORD	Transit VIII Van - L2	16>	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A		✓		✓		✓
FORD	Transit VIII Van - L3	16>	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A		✓	*	✓		✓
IVECO	Daily V 3520/H2 (10,8m ³)	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B		✓		✓		✓
IVECO	Daily V 3520/H2 (10,8m ³)	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B		✓		✓		✓
IVECO	Daily V 3520/H2 (12m ³)	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B		✓		✓		✓
IVECO	Daily V 4100/H2 (16m ³)	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B		✓		✓		✓
IVECO	Daily V 4100/H2 (17,5m ³)	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B		✓		✓		✓
IVECO	Daily V 3000/H1 (7,3m ³)	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B		✓		✓		✓
IVECO	Daily V 4100/H3(13,4m ³)	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B		✓		✓		✓
IVECO	Daily V 4100/H3(18m ³)	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B		✓		✓		✓
IVECO	Daily V 4100/H3(19,6m ³)	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B		✓		✓		✓
IVECO	Daily V 3520/H1 (9m ³)	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B		✓		✓		✓
MAN	TGE	16>	000132000000	3586105	SET 3 BARRE PROFESSIONAL AIRDYN F	*	✓	*	✓	*	✓
MERCEDES	Citan (W415) - L1,L2 - H1,H2	12>21	000135100000	2125903	SET 2 BARRE PROFESSIONAL AIRDYN L	✓					✓

MERCEDES	Citan (W415) - L3	12>21	000135100000	2125903	SET 2 BARRE PROFESSIONAL AIRDYN L	√		*			√
MERCEDES	Citan II	21>	000135100000	2125903	SET 2 BARRE PROFESSIONAL AIRDYN L	√		*	√		
MERCEDES	Metris (W447)	14>	000131800000	3586103	SET 3 BARRE PROFESSIONAL AIRDYN D	√			√	*	√
MERCEDES	Sprinter III - L1,L2,L3,L4 - H1,H2,H3	18>	000132000000	3586105	SET 3 BARRE PROFESSIONAL AIRDYN F	*	√		*	√	*
MERCEDES	Classe V (W447)	14>	000131800000	3586103	SET 3 BARRE PROFESSIONAL AIRDYN D	√			√	*	√
MERCEDES	Vito (W447)/Viano - L1,L2,L3 - H1,H2	14>	000131800000	3586103	SET 3 BARRE PROFESSIONAL AIRDYN D	√			√	*	√
MITSUBISHI	Express (X83) - L1,L2	14>	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A	*	√			√	√
NISSAN	Nv200	09>21									
NISSAN	Nv250 - L1,L2 - H1,H2	19>21	000135100000	2125903	SET 2 BARRE PROFESSIONAL AIRDYN L	√					√
NISSAN	Nv250 - L3	19>21	000135100000	2125903	SET 2 BARRE PROFESSIONAL AIRDYN L	√			*		√
NISSAN	Nv300 (X83) - L1,L2	14>21	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A	*	√			√	√
NISSAN	Nv400 - L1,L2 - H1,H2	10>21	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A	√				√	√
NISSAN	Nv400 - L3	10>21	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A	√			*	√	√
NISSAN	Townstar	21>	000135100000	2125903	SET 2 BARRE PROFESSIONAL AIRDYN L	√		*	√		
NISSAN	Primastar	21>	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A	*	√			√	√
NISSAN	Interstar	21>									
OPEL / VAUXHALL	Combo (E)	18>	000132100000	2125901	SET 2 BARRE PROFESSIONAL AIRDYN G	√			*		√
OPEL / VAUXHALL	Movano	10>21	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A	√			*	√	*
OPEL / VAUXHALL	Movano - L1,L2 - H1,H2	10>21	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A	√			√		√
OPEL / VAUXHALL	Movano III	21>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B	√			√		√
OPEL / VAUXHALL	Vivaro (C) - L1	19>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H				√	*	√
OPEL / VAUXHALL	Vivaro (C) - L2,L3	19>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H		√		*	√	*
OPEL / VAUXHALL	Zafira Life	19>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H		√		√	√	
PEUGEOT	Bipper	07>21	000135000000	2125902	SET 2 BARRE PROFESSIONAL AIRDYN I	√			*		√
PEUGEOT	Boxer III - L1,L2,L3,L4 - H1,H2,H3	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B	√			√		√
PEUGEOT	Expert III - L1	16>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H				√	*	√
PEUGEOT	Expert III - L2,L3	16>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H		√		*	√	*
PEUGEOT	Manager II	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B	√			√	*	√
PEUGEOT	Partner III	18>	000132100000	2125901	SET 2 BARRE PROFESSIONAL AIRDYN G	√			*		√
PEUGEOT	Rifter	18>	000132100000	2125901	SET 2 BARRE PROFESSIONAL AIRDYN G	√			*		√
PEUGEOT	Traveller	16>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H				√	*	√
RAM	Promaster City	15>	000131900000	2125900	SET 2 BARRE PROFESSIONAL AIRDYN E	√			*		√
RAM	ProMaster (Van) - L1,L2,L3,L4 - H1,H2,H3	14>	000131600000	3586101	SET 3 BARRE PROFESSIONAL AIRDYN B	√			√		√
RENAULT	Express II - L1,L2	20>	000135100000	2125903	SET 2 BARRE PROFESSIONAL AIRDYN L	√			*		
RENAULT	Kangoo III (MK3) - L1,L2	21>	000135100000	2125903	SET 2 BARRE PROFESSIONAL AIRDYN L	√		*	√		
RENAULT	Master III	10>	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A	√			*	√	*
RENAULT	Master III - L1,L2 - H1,H2	10>	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A	√			√		√
RENAULT	Trafic III (X83) - L1,L2	14>	000131300000	3586100	SET 3 BARRE PROFESSIONAL AIRDYN A	*	√		√		√
TOYOTA	Proace City	18>	000132100000	2125901	SET 2 BARRE PROFESSIONAL AIRDYN G	√			*		√
TOYOTA	Proace II	16>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H	√			√		√
TOYOTA	Proace II	16>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H	√		*	√	√	
TOYOTA	Proace Verso	16>	000134900000	3586104	SET 3 BARRE PROFESSIONAL AIRDYN H				√	*	√
VOLKSWAGEN	Caddy III (2K) - L1,L2	15>20									
VOLKSWAGEN	Caddy (5B) - L1,L2	21>	000135200000	2125904	SET 2 BARRE PROFESSIONAL AIRDYN M	√			*		√
VOLKSWAGEN	Crafter II - L2,L3,L4,L5 - H2,H3,H4	17>	000132000000	3586105	SET 3 BARRE PROFESSIONAL AIRDYN F	*	√		*	√	*
VOLKSWAGEN	T6 Transporter - L1,L2	15>21	000131700000	3586102	SET 3 BARRE PROFESSIONAL AIRDYN C	√			√		√
VOLKSWAGEN	T7 Transporter - L1,L2	21>	000131700000	3586102	SET 3 BARRE PROFESSIONAL AIRDYN C	√			√		√